


6、 WOOD WORKING

6.1 Electric Planer

AMB82/DMB82/KMB82

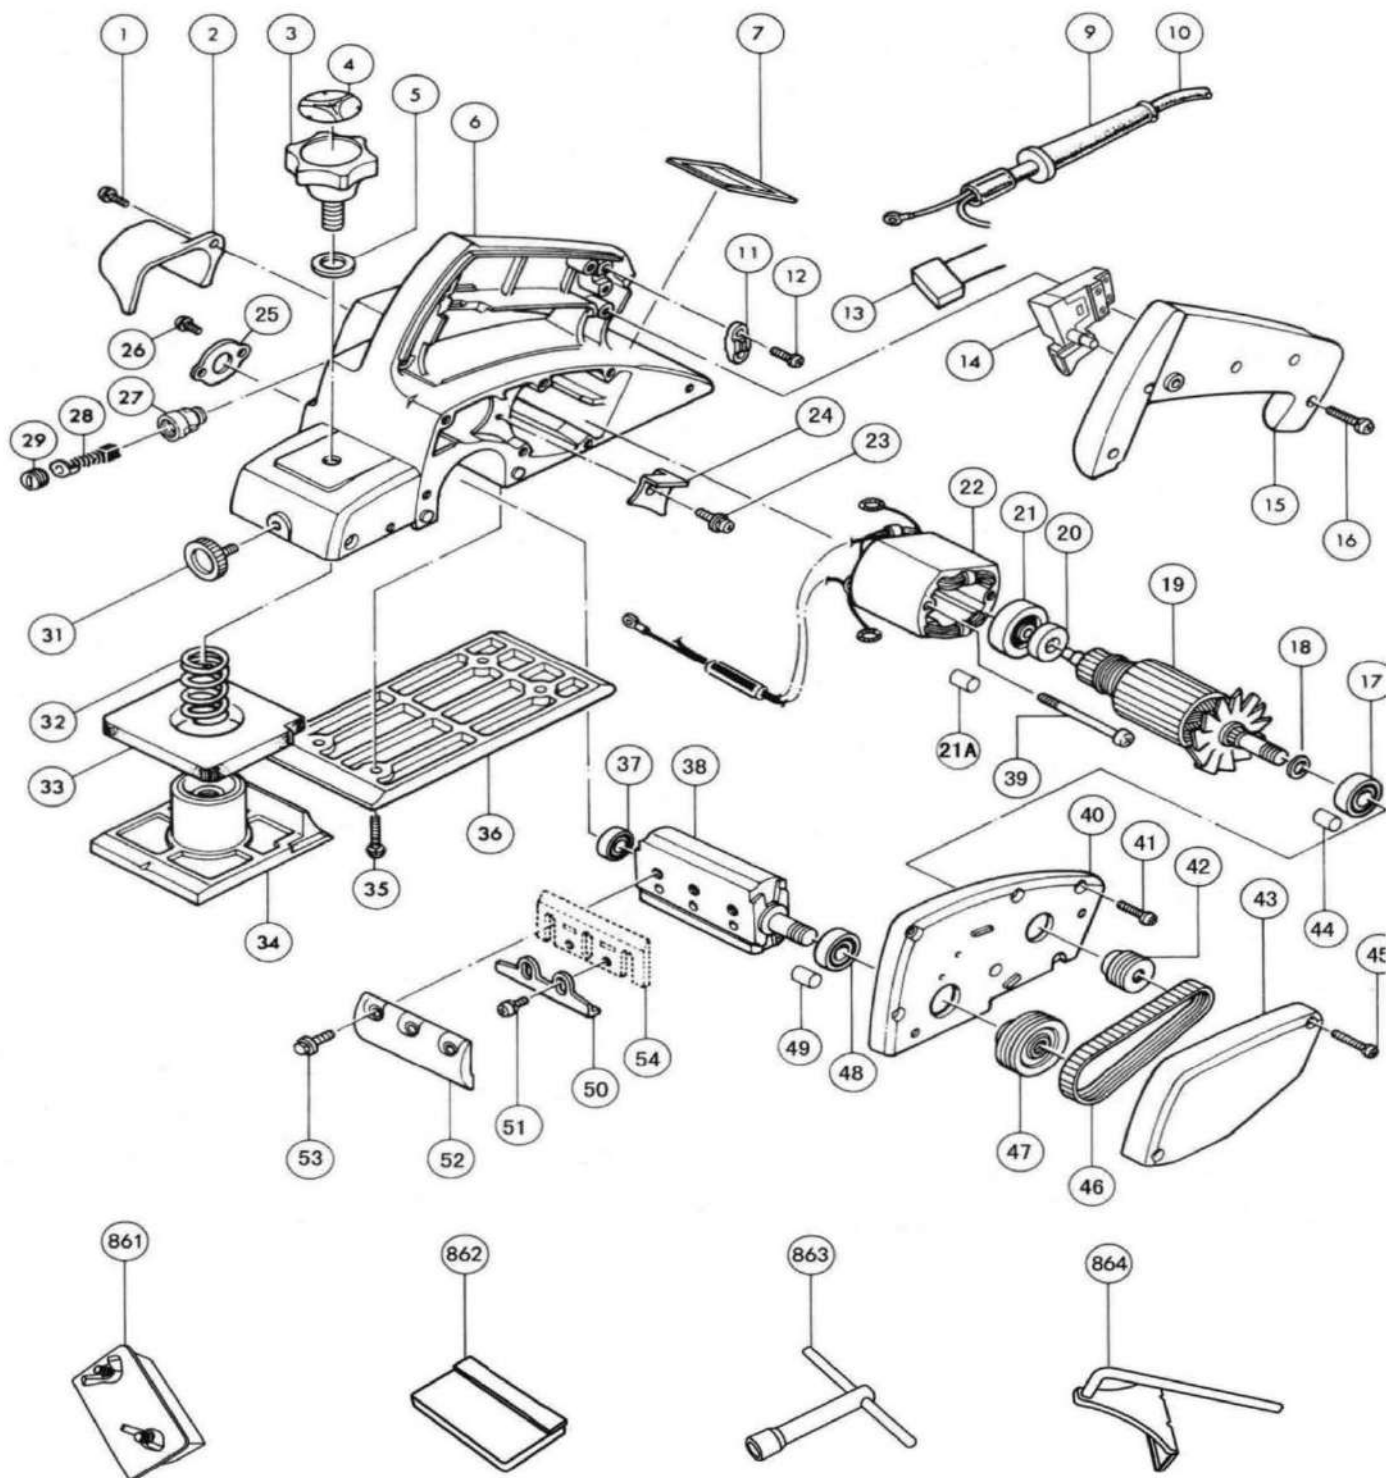

No	Code	Name of Spare Parts	Remark
1	30021200036	Cross Recessed Pan Head Tapping Screw ST4.2×15	
2	30019901920	Chip Cover	
3	30019900055	Adjusting Knob	
4	30040500022	Scale Plate	
5	30021600193	Washer 25×10.3×1	
9	30010100029	Cord Guard (PVC)	
10	30030300431	Power Cord (British Standard Plug)	110-220V
10	30030300053	Power Cord (European Standard Plug)	110-220V
10	30030300002	Power Cord (Australian Plug)	110-220V
10	30030300036	Power Cord (Flat Plug)	110-220V
10	30030300556	Brazilian Power Cord	110-220V
10	30030300565	Power Cord (Australian Plug)	110-220V
10	30030300495	Korean Power Cord	110-220V
11	30016300005	Strain Relief	
12	30021200036	Cross Recessed Pan Head Tapping Screw ST4.2×15	
13	30030400020	Inductance Assembly	
14	30030100029	Lock-On Switch	110-220V
14	30030100385	Switch (anti-self-locking)	110-220V
16	30021100225	Cross Recessed Pan Head Tapping Screw ST4.2×20	
17	30021400233	Ball Bearing 6000VV-DC02	
18	30021600123	Washer (10×21×0.5)	
19	30100400088	Armature	220V
19	30200401030	Armature	220V
19	30400401027	Armature	220V
19	30500400323	Armature	220V
19	30100400007	Armature	240V
19	30200401566	Armature	240V
19	30400401220	Armature	240V
19	30400401039	Armature	110V
19	30400400931	Armature	127V
20	30016300011	Insulation Washer	
21	30021400232	Ball Bearing	
22	30400600021	Stator	220V
22	30200600026	Stator	220V
22	30100600036	Stator	220V
22	30400600003	Stator	110V
22	30100600035	Stator	240V
22	30400600161	Stator	240V
22	30200600027	Stator	240V

No	Code	Name of Spare Parts	Remark
22	30400600445	Stator	127V
23	30021200036	Cross Recessed Pan Head Tapping Screw ST4.2×15	
24	30219900003	Air Baffle (Green)	
24	30116000001	Air Baffle (Blue)	
24	30316000001	Air Baffle (Red)	
25	30024000103	Bearing Cover	
26	30021200037	Cross Recessed Pan Head Tapping Screw ST4×8	
27	30030700008	Brush Holder Assembly	
28	30030600029	Carbon Brush	
29	30030800005	Brush Holder Cap	
31	30019900113	Set Screw	
32	30024500017	Compression Spring (21×3×46)	
33	30010000092	Rubber Pad	
34	30024100023	Movable Base	
35	30021200038	Pan Head Tapping Screw ST5×16	
36	30024100027	Rear Base	
37	30021400239	Ball Bearing 608-2RS-Dc02 (LFB)	
38	30023000031	Drum	
39	30021200039	Pan Head Tapping Screw ST4.2×60	
40	30023700032	Bearing Retainer	
41	30021200020	Pan Head Tapping Screw ST4.2×25	
42	30023000075	Small Belt Pulley	
43	30019900188	Belt Cover	
44	30010200006	Rubber Pin (5×6.7)	
45	30121100038	Cross Recessed Pan Head Screw M4×25 (With Spring And Flat Washers)	
46	30010700001	Poly V-Belt 4PJ230	
47	30023000074	Big Belt Pulley	
48	30021400233	Ball Bearing 6000VV-DC02	
49	30010200006	Rubber Pin (5×6.7)	
50	30024000104	Adjusting Plate	
51	30021100037	Pan Head Screw ST4×5 (with Flat Washer)	
52	30024000105	Drum Plate Set	
53	30021100039	Hex Flange Bolt M6×18	
54	30029800001	Blade	
861	30005090112	Sharpening Holder Assembly	
862	30019900077	Blade Gauge	
863	30025100004	Socket Wrench 9	
864	30024000107	Guide plate Assembly	
21A	30010200001	Rubber Pin (4×9.5)	
T2	30415400074	Housing With Handle Assembly (Blue)	Including: 6、15

No	Code	Name of Spare Parts	Remark
T2	30215410152	Housing With Handle Assembly (Green)	Including: 6、 15
T2	30515400104	Housing With Handle Assembly (Red)	Including: 6、 15