

No	Code	Name of Spare Parts	Remark
1	30071300010	Chuck Wrench	
2	30021100033	Cross Recessed Small Pan Head Screw M5×20 (Left Thread)	
3	30021000007	Steel Ball 6.35	
4	30171200009	Drill Chuck 13mm	
5	30019900094	Function Turnplate	
6	30024000097	Pad	
7	30020100037	Drive Spindle	
7	30020100207	Drive Spindle (1/2×20UNF)	
8	30021600120	Washer (6.2×23.8×1)	
9	30050900019	Dust Washer (17.5×20×12)	
10	30021400062	Ball Bearing 6002VV	
11	30110300043	O Ring (5×1.5)	
12	30021600039	Split Washer 12	
13	30020500105	Gear	
14	30115300019	Motor Housing Assembly (Blue)	
14	30215200016	Motor Housing Assembly (DCA)	
14	30415400185	Motor Housing Assembly (DongCheng)	
14	30515400150	Motor Housing Assembly (DCK)	
14	30215410207	Motor Housing Assembly (Green)	
14	30115410212	Motor Housing Assembly (东成)	
15	30021200022	Cross Recessed Pan Head Tapping Screw ST4.2×19	
16	30030500031	Lead Wire 110	
17	30030500030	Lead Wire 125	
18	30030100020	Trigger Switch	220-240V
18	30030100332	Switch (110V)	110V
19	30030500143	Lead Wire 150	
20	30030500143	Lead Wire 150	
21	30030300053	Power Cord (European Standard Plug)	110-220V
21	30030300475	Power Cord (Flat Plug)	110-220V
21	30030300431	Power Cord (British Standard Plug)	110-220V
21	30030300002	Power Cord (Australian Plug)	110-220V
21	30030300556	Brazilian Power Cord	110-220V
21	30030300565	Power Cord (Australian Plug)	110-220V
21	30030300495	Korean Power Cord	110-220V
22	30010100032	Cord Guard (PVC)	
23	30021200008	Cross Recessed Pan Washer Head Tapping Screw ST4×16	
24	30116300007	Strain Relief	
25	30024500058	Spring (16.5×1.2×10)	
26	30030700032	Carbon Brush Holder	

No	Code	Name of Spare Parts	Remark
27	30030400031	Inductor Assembly	Areas where capacitors and inductors need to be assembled
27	30030500097	Lead Wire 95	Areas where capacitors and inductors needn't to be assembled
28	30030600027	Carbon Brush	220-240V
28	30030600053	Carbon Brush	110V
29	30030400045	Capacitor& Inductor Assembly	Areas where capacitors and inductors need to be assembled
29	30030500097	Lead Wire 95	Areas where capacitors and inductors needn't to be assembled
30	30010200005	Rubber Pin (3.5×5)	
31	30021400008	Ball Bearing 607Z (RB)	
32	30100600346	Stator	220-240V
32	30400600278	Stator	110V
32	30400600239	Stator	220-240V
32	30200600262	Stator	220-240V
32	30500600016	Stator	220-240V
34	30500400213	Armature	220-240V
34	30200401297	Armature With Bearings	220-240V
34	30400401423	Armature	110V
34	30100400454	Armature	220-240V
34	30200401230	Armature	220-240V
34	30400401224	Armature	220-240V
34	30400401196	Armature With Bearings	220-240V
36	30022000002	Impact Block	
37	30021100144	Pan Head Screw M4×25	
38	30023400046	Motor Bracket	
39	30021400133	Needle Bearing HK0810 (SZZH)	
40	30021400132	Needle Bearing Hk0808 (SZZH/JH)	
861	30005090041	Auxiliary Handle Assembly	
862	30024000094	Depth Gauge	