



TWC-521 Tire Changer Exploded View

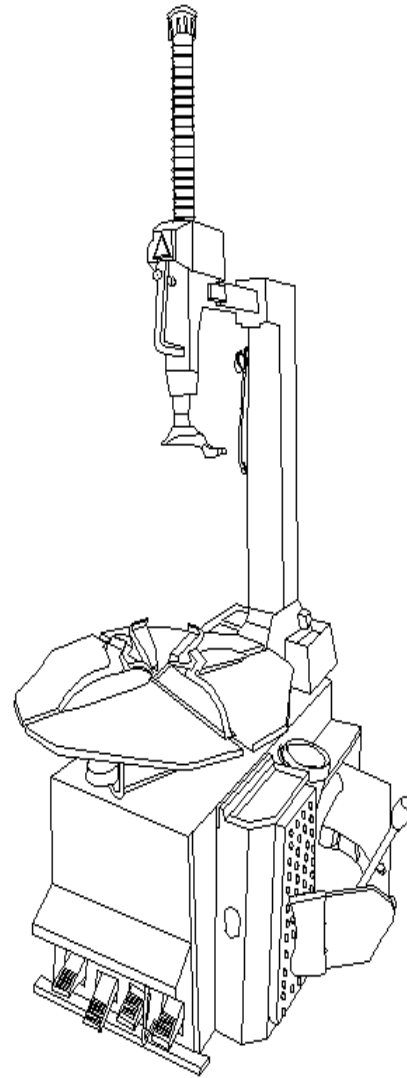

18.08.22	060101105	522-01-00 (X)	Tire Changer Cabient Part		
Customer No.	S/N	Class	M/N	English Description	中文描述
	1	●	05010010375	BB Arm Shaft	铲臂销轴
	2	●	05010010376	BB Arm Shaft Baffle	铲臂销挡板
	3		030201043	SHCS M6x16	内六角圆柱头螺钉
	4		030501004	Washer φ6	平垫圈
	5		030502004	Spring Washer φ6	弹性垫圈
	6	●	05010030007	Square Turntable Eccentric Locking Collar	二盘偏心套
	7	●	05010030006	Square Turntable Pull Rod Set	二盘拉杆套
	8		030201113	SHCS M12x35	内六角圆柱头螺钉
	9		030502007	Spring Washer φ12	弹性垫圈
	10	○	020101038	BB Arm Shock	铲臂缓冲套
	11	○	020702010	BB Return Spring	大铲拉簧
	12	●	020101037	Wheel Support Pad	矩形胶板
	13		030201406	Cross Recessed Pan Head Screw M6X20	十字槽盘头螺钉
	14		030501104	Pad	大垫圈
	15	○	05010010606	Support Assembly Welding Parts	支架组焊件
	16	○	05010010609	Soap Bucket Support Adjustment Rack	水盒调整架
	17		030101023	HHB M6x20	六角头螺栓
	18		030301053	Nut M6	1型非金属嵌件六角锁紧螺母
	19		030201044	SHCS M6x20	内六角圆柱头螺钉
	20		030201002	SHCS M4x8	内六角圆柱头螺钉
	21		030201433	Hexagon Socket Head Screw M16X40	内六角沉头螺钉
	22		030201402	SHCS M6x10	内六角圆柱头螺钉
	23		030206002	STS ST5.5X25	华司钻尾钉
	24		022101009	Earth Wire Logo	地线标识
	25		020803001	Labels	标牌
	26		031001001	Half-round Head Rivet	半圆头铆钉
	27		020101007	Block	方堵
	28	○	020101005	Plastic Foot	地脚胶块
	29		030101162	HHB M12x70	六角头螺栓
	30		030501007	Washer φ12	平垫圈
	31	○	020601037	Waterproof Via Coil Nut M20	防水过线圈螺母
	32		060101011	Cabient Weldment	箱体组焊件

- | | | |
|----|-------------|---------------------------------------|
| 33 | 05010010328 | Side Cover |
| 34 | 030204101 | Cross Recessed Round Head Screw |
| 35 | 05010011036 | Chassis Front Board |
| 36 | 05010060044 | Pedal Block Board |
| 37 | 030301002 | Hexagon Screws, Type I, M8 |
| 38 | 030502005 | Spring Washer $\phi 8$ |
| 39 | 030201403 | Cross Recessed Round Head Screw M6X12 |

- | |
|----------|
| 箱体侧板 |
| 十字槽大扁头螺钉 |
| 箱体前板 |
| 脚踏挡 |
| I型六角螺母 |
| 弹性垫圈 |
| 十字槽盘头螺钉 |

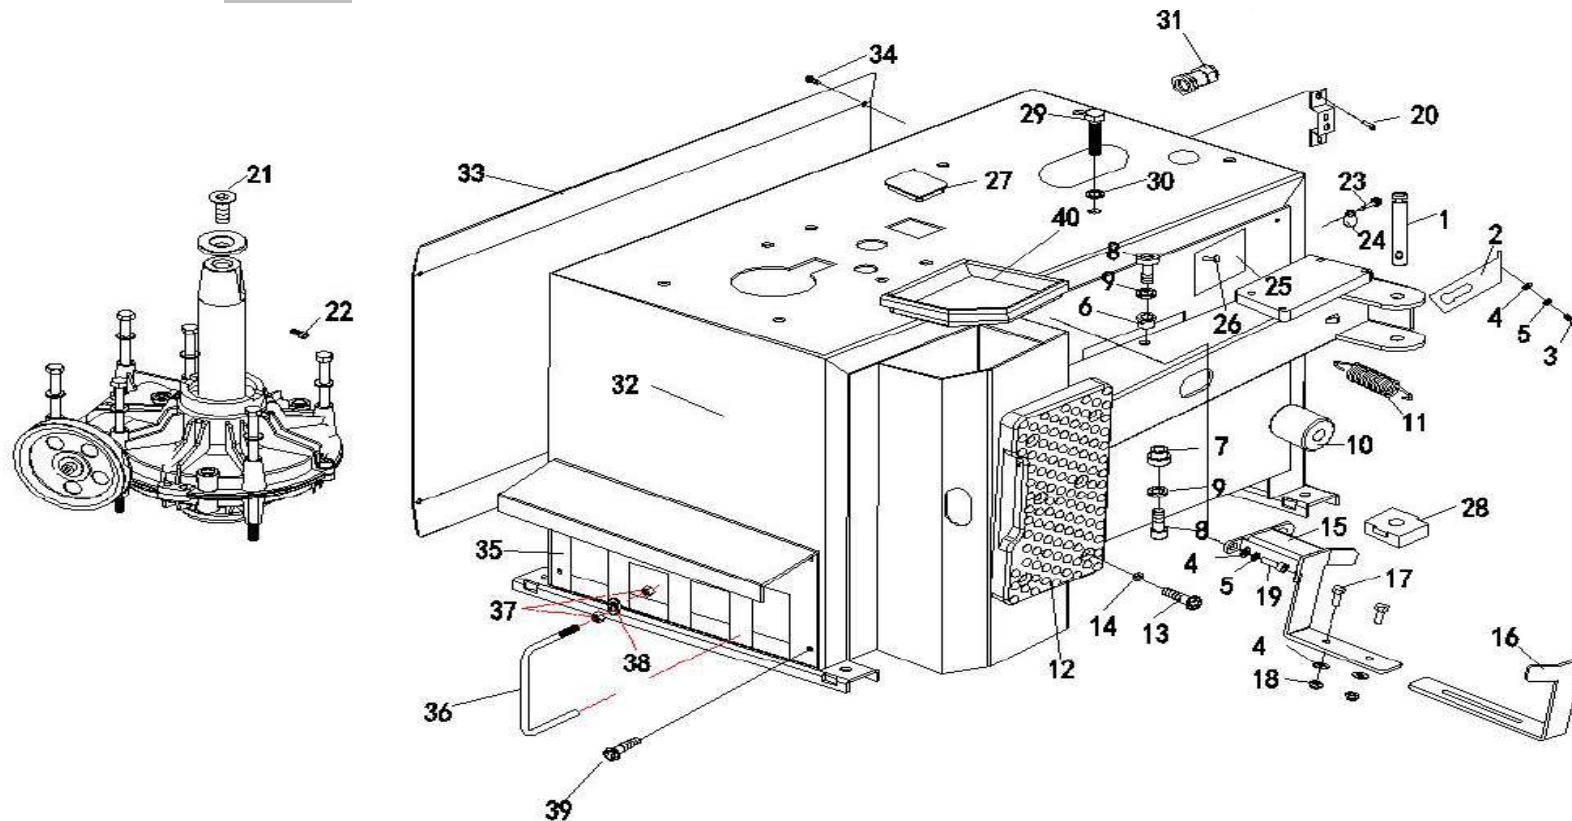

18.08.22	060102008 Tire Changer Tower Part 522A-02-00(A)					
Customer No.	S/N	Class	M/N	English Description	中文描述	
	1	●	020601208	Inner Tilt Tower Cover	立柱罩盒	
	2		05010020956	Vertical Arm Base	立柱底盘组焊件(B)	
	3		030501004	Washer φ6	平垫圈	
	4		030201042	SHCS M6x12	内六角圆柱头螺钉	
	5		030301108	Nut M12	1型六角螺母 A级和B级	
	6		030101154	HHB M12X30	六角头螺栓	
	7		030904150	Horizontal Arm Roller Pin	圆柱销	
	8		030101085	HHB M10X30	六角头螺栓	
	9		030301107	Nut M10	1型六角螺母 A级和B级	
	10	●	020101057	Tilt Tower Rubber Shock	立柱缓冲垫	
	11		030301057	Locking Nut M14	1型非金属嵌件六角锁紧螺母	
	12		05010020453	Pad	后倾调整垫	
	13		05010020445	Tapered Metal Bushing;	立柱轴支承锥套	
	14		05010020416	Tilt Tower Pivot Pin	立 柱 轴	
	15		030301137	Nut M10	六角薄螺母	
	16	●	020601095	Inner Tilt Tower Cover	立柱防尘罩	
	17		030201044	SHCS M6x20	内六角圆柱头螺钉	
	18		030202031	Inner hexgon set screw M8X40	内六角平端紧定螺钉	
	19		030301106	Nut M8	1型六角螺母 A级和B级	
	20		05010020449	Horizontal Arm Roller ;	方杠滚轮轴	
	21		05010020452	Horizontal Arm Cover	方杠滚轮套	
	22		●	020601098	Tracheal Sleeve	气管保护套
	23		05010020426	Threaded Rod Support Screw	方杠锁紧板支承螺丝	
	24		05010020429	Threaded Rod Screw	方杠锁紧板螺丝	
	25		●	05010020427	Horizontal Shaft Locking Plate	四方杠锁紧板
	26		05010020443	Horizontal Slide Stop;	方杠锁紧板压垫	
	27		030301055	Locking Nut M10	1型非金属嵌件六角锁紧螺母	
	28	●	020701021	Rear Lock Plate Spring;	锁紧板压簧	
	29	○	020601097	Real Lock Cylinder Cover;	后倾后罩	
	30		030301054	Locking Nut M8	1型非金属嵌件六角锁紧螺母	
	31		030501005	Washer φ8	平垫圈	
	32		030202073	Hexagonal Screw M8X25	内六角平端紧定螺钉	

33
34
35




060110003 Horizontal Arm Lock Cylinder

05010021110 Tilt-back Tower Weldment


05010020444 Inflation Gun Hook


四方杠锁紧气缸总成
立柱组焊件
充气枪挂钩

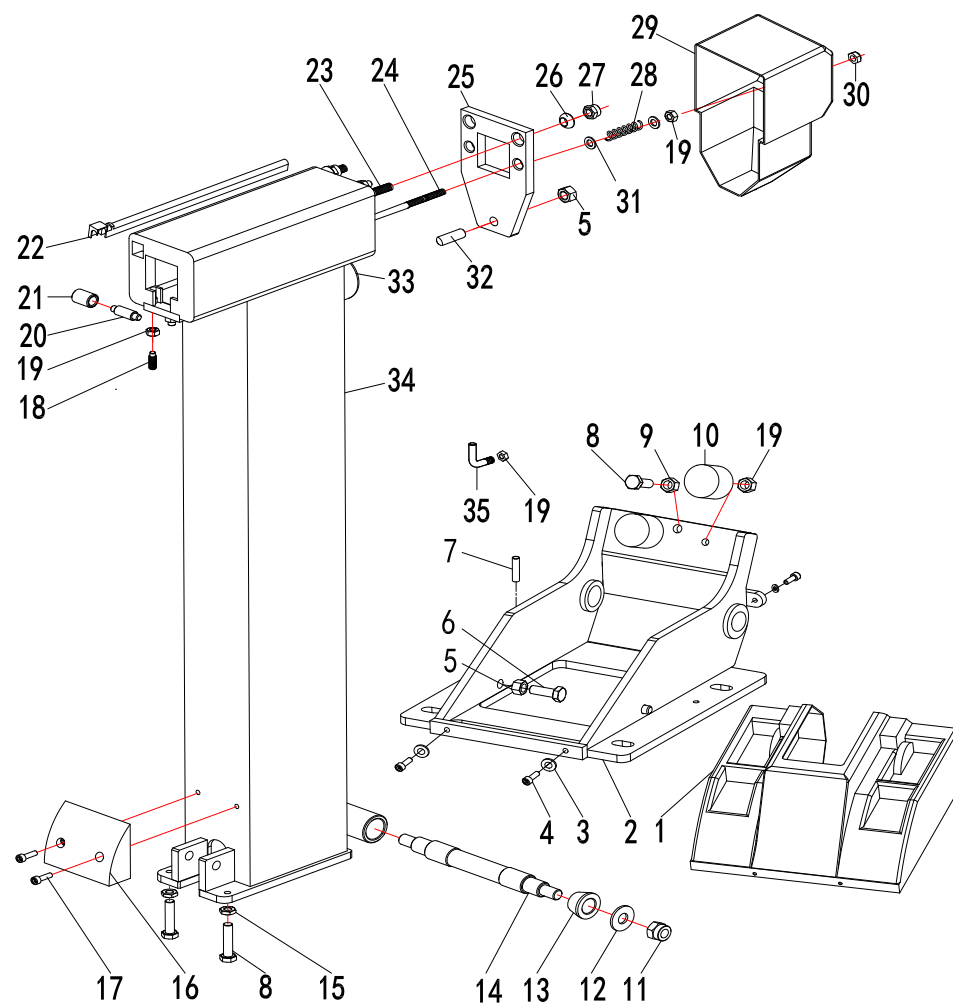


18.08.22	060103053	Tire Changer	Turntable Assembly Part	522-03-00 (N)	
Customer No.	S/N	Class	M/N	English Description	中文描述
	1	●	05010030065	Square Turntable Weldment	方工作盘组焊件
	2	●	060112003	Jaw Clamp Cylinder Assy	522工作盘小汽缸总成
	3	●	060113002	Square Turntable Assy	522二盘总成
	4	○	020601020	Small Cylinder Cover;	小汽缸前盖防护罩
	5		030604005	Snap Ring $\phi 12$	轴用弹性挡圈A型
	6	●	05010030288	Slide Protection Assembly Welding Piece	滑块护板组焊件
	7	●	05010030004	Pad	二盘拉杆垫
	8	●	05010030006	Spacer	二盘拉杆套
	9		030502007	Spring Washer $\phi 12$	弹性垫圈
	10		030101261	HHB M12x50	六角头螺栓
	11		030604058	Snap Ring $\phi 65$	轴用弹性挡圈A型
	12		030501007	Washer $\phi 12$	平垫圈
	13	●	05010030007	Square Turntable Eccentric Sleeve	二盘偏心套
	14	●	05010030289	Slide guard board	护板组合
	15	●	05010030175	Jaw Clamp Support;	小船
	16		030902075	Pin $\Phi 4 \times 16$	弹性圆柱销
	17	○	020601021	Small Rear Cylinder Cover	小汽缸后盖防护罩
	18	●	05010030174	Jaw Clamp;	卡 爪
	19	●	020601051	Rubber Blanket For Jaw Clamp	小卡爪保护套
	20		030201083	SHCS M10x25	内六角圆柱头螺钉
	21	●	05010030173	Jaw Clamp Slide;	小船垫板
	22		020203070	Fitting; Tee $\phi 8-\phi 8-\phi 8$	锁母三通
	23	●	05010030013	Slide Shim Adjustment	小船调整垫

An exploded view diagram of a turntable assembly. The diagram shows the main square turntable weldment (1) at the center. Surrounding it are various components: jaw clamp cylinders (2), jaw clamp supports (15), jaw clamps (18), and jaw clamp slides (21). There are also small cylinder covers (4, 17), a slide guard board (14), a rubber blanket (19), and various fasteners like pins (16), washers (12), and springs (9). The diagram is numbered 1 through 23, corresponding to the parts list.

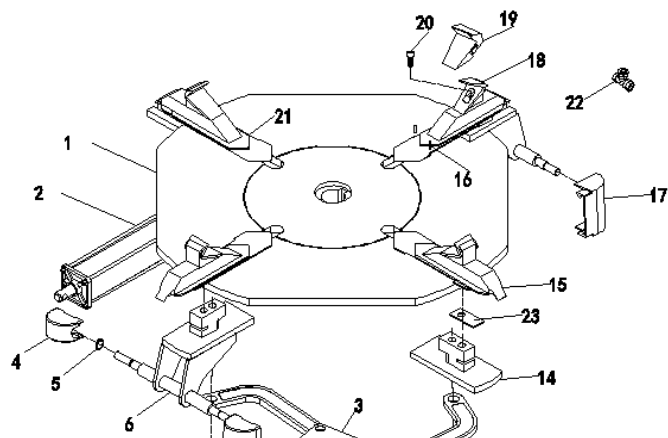


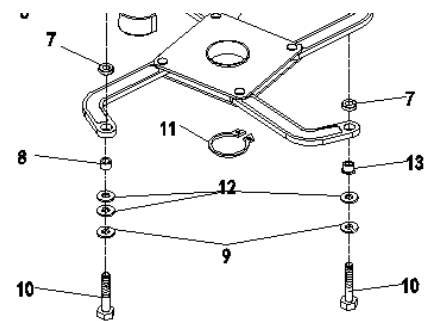

18.08.22	060104028	522万向铲架部分 (G)		Bead Breaker Blade Frame	522-04-00 (G)
Customer No.	S/N	Class	M/N	English Description	中文描述
	1	●	020601146	Board The Seat	新大铲套
	2		05010040016	Contains Busing	大铲套固定套
	3		030201041	SHCS M6x10	内六角圆柱头螺钉
	4	⦿	020601023	Bead Breaker Blade Handle	铲把手柄
	5	⦿	05010040014	Bead Breaker Main Welding Accessory	大铲组焊件
	6	⦿	030201171	SHCS M14x95	内六角圆柱头螺钉
	7	⦿	05010040040	Bead Breaker Knuckle	大铲转轴
	8		030301057	Locking Nut M14	1型非金属嵌件六角锁紧螺母
	9		05010040222	Bead Breaker Arm Pivot Pin;	铲臂中间轴
	10		05010040270	Bead Breaker Arm Assy	铲臂组焊件
	11		030501105	Pad	大垫圈
	12		030502005	Spring Washer φ8	弹性垫圈
	13		030201062	SHCS M8x16	内六角圆柱头螺钉
	14		030507007	Waveform Spring Washer φ16	波形弹性垫圈
	15		030507004	Waveform Spring Washer φ14	波形弹性垫圈
	16		030501009	Washer φ16	平垫圈
	17		030301058	Locking Nut M16	1型非金属嵌件六角锁紧螺母

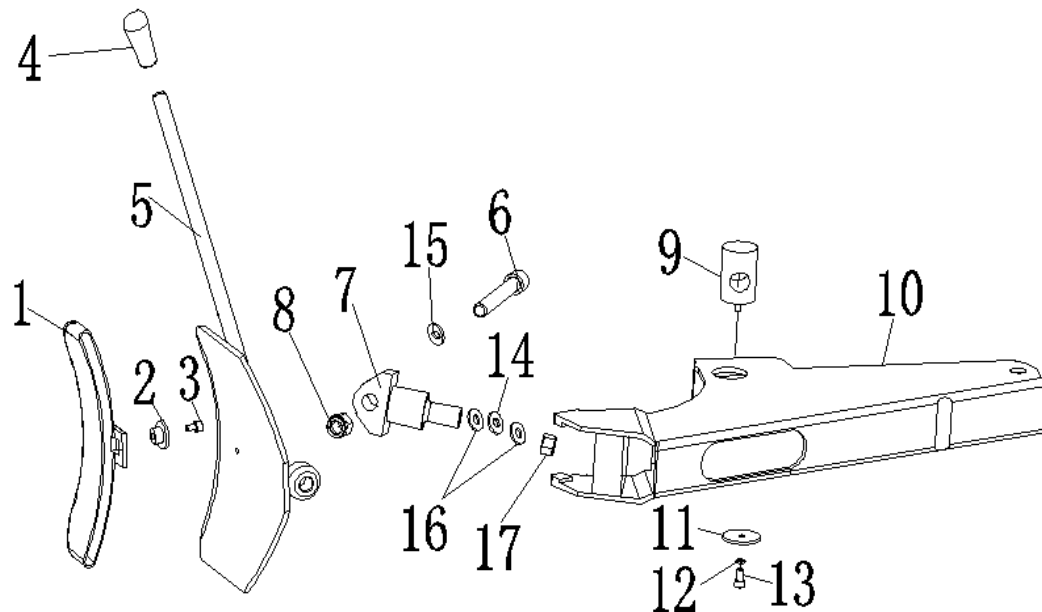

18.08.22	060105001	Tire Changer Gear Box		450-05-00 (A)	
Customer No.	S/N	Class	M/N	English Description	中文描述
1		●	060105001	Gear Box	普通减速箱总成 (A)
2			05010050010	Oil Plug	油 塞
3			05010050001	Gearbox Front Flange	减速箱上盖
4			030201065	SHCS M8x30	内六角圆柱头螺钉
5			030802004	Bearing	深沟球轴承
6			05010050003	Vertical Shaft	立轴
7			030701095	Tab 6X6X20	普通平键
8			05010050005	Helical Gear	蜗轮
9			020101011	Oil Block	油堵
10			030810001	TRB	圆锥滚子轴承
11			05010050009	Gear Stud	蜗杆
12			030701026	Tab 6X6X20	普通平键
13			05010050007	Gear stud pad	蜗杆压垫
14			030201062	SHCS M8x16	内六角圆柱头螺钉
15			030502005	Spring Washer φ8	弹性垫圈
16			05010050008	Big Size Belt Pulley	大皮带轮
17			020101010	Oil SealΦ45X25X10	油封
18			0530105006	Transmission Back Flange	减速箱下盖
19			030301002	Nut	1型六角螺母
20			030802003	Bearing	深沟球轴承
21			030604043	Seeger ring φ50	轴用弹性挡圈A型

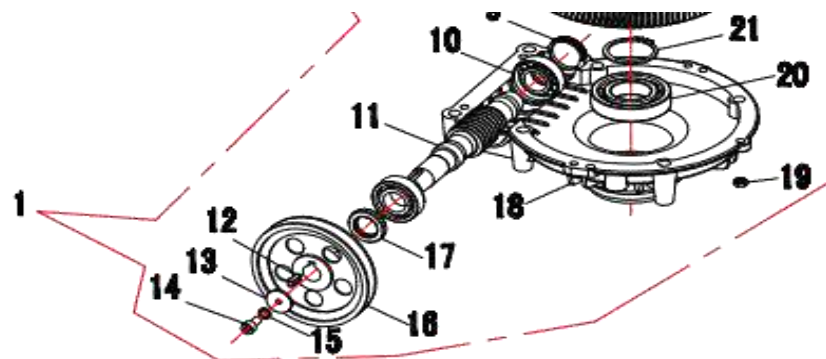

18.08.22 060106015 Tire Changer Foot Pedal 522WR-06-00


Customer No.	S/N	Class	M/N	English Description	中文描述
	2	●	020203030	Fitting; G1/8" Φ8 90°	锁母弯通
	3	●	020203023	Adjustable Silencer	可调消音器
	5	●	020601050	Air Valve Skeleton	小气阀骨架
	6	●	020501013	O-ring Φ17X4	O型圈
	7	●	05010060049	Cylinder Valve Stem	大汽缸气阀杆
	8	●	020601078	Small Valve End Cover	小气阀端盖
	9		030201403	Cross Recessed Pan Head Screw M6X12	十字槽盘头螺钉
	10		030502004	Spring Washer Φ6	弹性垫圈
	11		030201458	Cross Recessed Countersunk Head Screw M4×10	十字槽沉头螺钉
	12		030301002	Nut M8	1型六角螺母
	13	●	05010060010	Small Air Valve Sub	小气阀接头
	14		030904094	Cylindrical Pin Φ4X18	圆柱销
	15	●	05010060033	Small Valve Pull Plate	小气阀拉板
	16		030301053	Locking Nut M6	1型非金属嵌件六角锁紧螺母
	17		05010060037	Foot Pedal (Right);	脚踏板(右)
	18		030604005	Snap Ring Φ12	轴用弹性挡圈A型
	19		05010060030	Base Board	底板
	20		030502005	Spring Washer Φ8	弹性垫圈
	21		030101042	HHB M8X16	六角头螺栓
	22		05010060035	Foot Pedal Shaft;	脚踏板轴
	23		05010060045	Control System Adjusting Pad	控制系统调整垫(薄)
	25		030201069	Hexagon Socket Head Cap Screws M8X50	内六角圆柱头螺钉
	26		05010060036	Torsion Splick lock Bracket	开关扭簧支架
	27	●	020703005	Torsional Spring	扭簧
	28		05010060043	Switch Block Stick	开关挡棍


29		020101017	Rubber
30		05010060034	Foot Pedal (Left);
31		030501104	Washer; Φ6
32		030903035	Cotter Pin 3.2X25

橡 胶 块
脚踏板（左）
大垫圈
开口销


33		05010060038	Switch Lever	开关拉杆
34	●	020601144	Switch Fork	双速开关拨叉
35		030201042	SHCS M6x12	内六角圆柱头螺钉
37		030501004	Washer φ6	平垫圈
38		05010060200	Switch Bracket	双速开关支架
39	●	020401012	Reverse Switch	倒顺开关 (380V/32A)
40	●	020601031	Big Switch Cover	大开关罩
41		030201052	SHCS M6x55	内六角圆柱头螺钉
42	●	020702008	Control Plate Spring	控制板拉簧
43	●	020203011	Fitting; G1/8" Φ8	锁母直通
44		030701251	Plug	丝堵
45		020203013	Fitting; G1/4" Φ8	锁母直通
46		020203021	Silencer G1/4"	铜消音器
47		020203072	Equal tee G1/4" Φ8	正三通
48		030501105	Pad	大垫圈
49		030201043	SHCS M6x16	内六角圆柱头螺钉
50		030201063	SHCS M8x20	内六角圆柱头螺钉
51		030201268	Cross Recessed Pan Head Screw M3X16	十字槽盘头螺钉
52		030201266	Cross Recessed Pan Head Screw M3X12	十字槽盘头螺钉
53		030502001	Spring Washer φ3	弹性垫圈
54		05010060050	Adjusting Sleeve	调整套1
55		030501002	Washer φ4	平垫圈
56		030502002	Spring Washer φ4	弹性垫圈
57		030201337	Cross Recessed Pan Head Screw M4X16	十字槽盘头螺钉
58		030201062	SHCS M8x16	内六角圆柱头螺钉
59		05010060201	Two-speed Switch Limit Plate	双速开关限位板
60		05010060202	Two-speed Switch Extension Plate	双速开关接长板
61	●	05010060040	Convex Wheel Cover	凸 轮 罩
62		030201044	SHCS M6x20	内六角圆柱头螺钉
63	●	05010060032	Small Gas Valve (A)	小气阀(A)
64	●	05010060041	Small Gas Valve (B)	小气阀(B)


65	●	020601079	Foot Pedal Cam;	控制凸轮
66	●	05010060039	Foot Pedal Cam Leaf Spring (Left);	凸轮垫片 (左)
67	●	05010060042	Foot Pedal Cam Leaf Spring (Right);	凸轮垫片 (右)
68		030301054	Locking Nut M8	1型非金属嵌件六角锁紧螺母
69		030507001	Spring Washer $\phi 8$	鞍形弹性垫圈
70		030501005	Washer $\phi 8$	平垫圈
71	●	020601080	Foot Pedal Cam Link	限位块拉杆
72		030204002	Cross Recessed Pan Head Tapping Screws	十字槽盘头自攻螺钉
73		020101012		过线圈 $\phi 12$

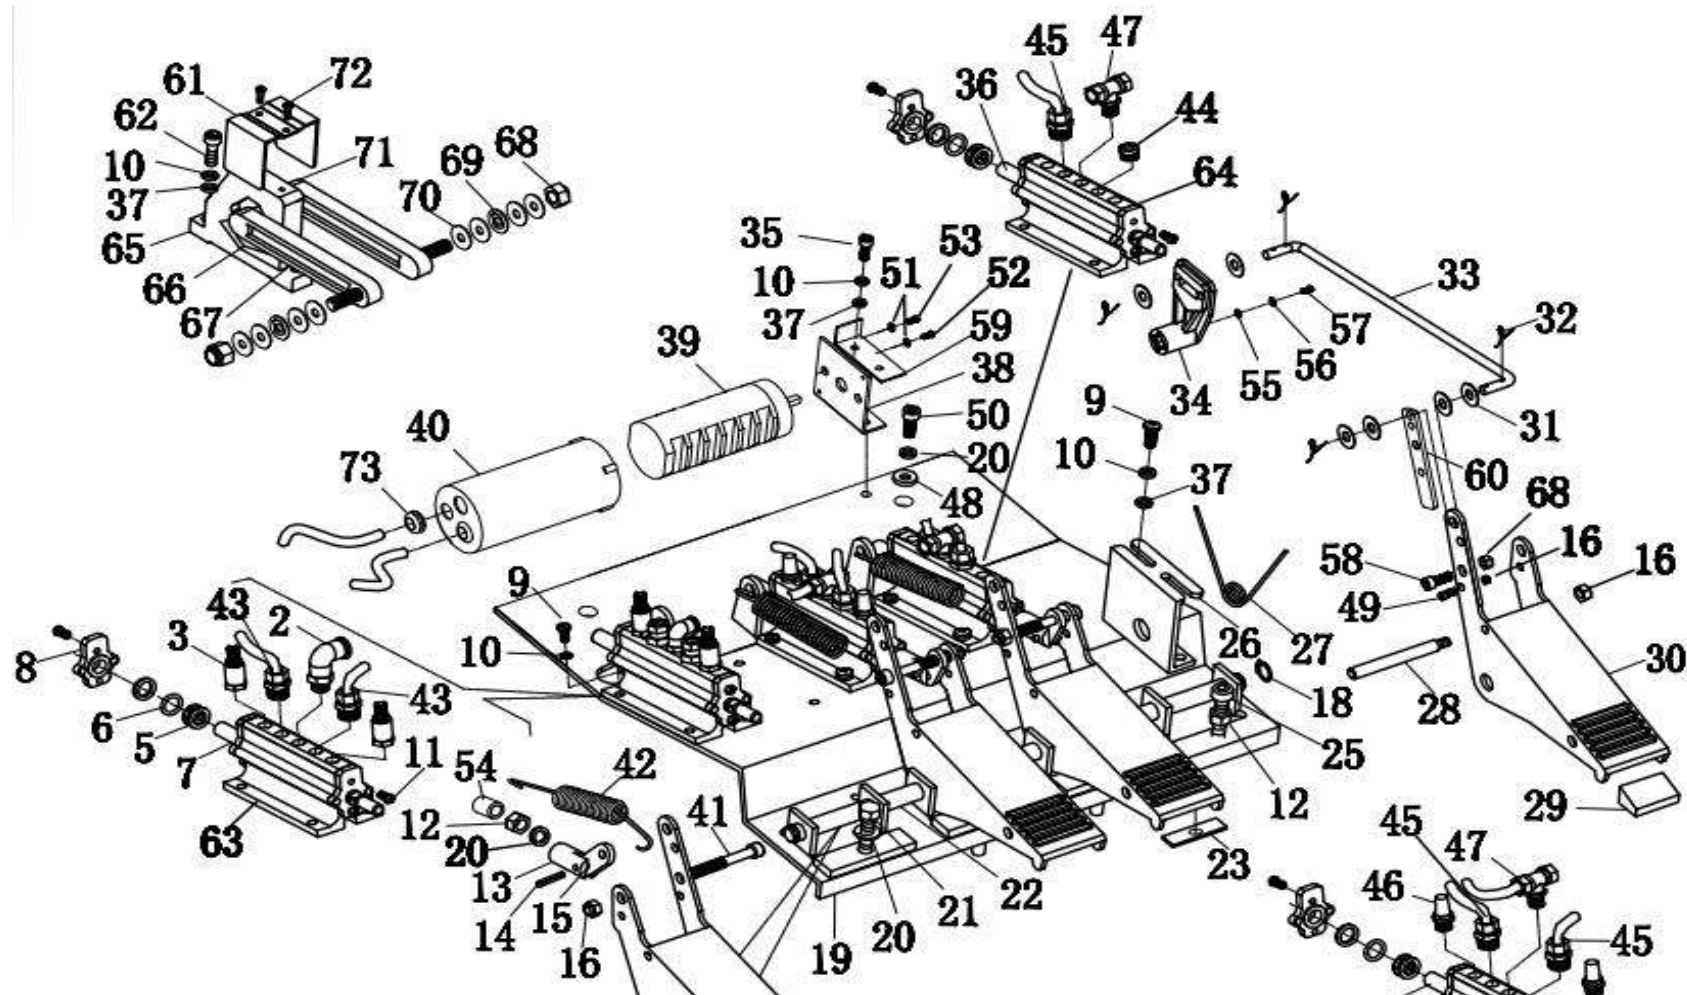

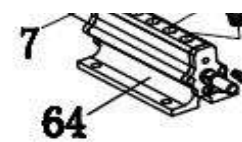


18.08.22	060107029	Tire Changer	Bead Breaker Cylinder	450-07-00CF	
Customer No.	S/N	Class	M/N	English Description	中文描述
	0	●	060116001	Quick Release Valve Assembly	450大气缸换气阀总成(A)
	1	●	020203080	Screwed Nipple; G1/4" -G1/4"	外牙对丝
	2	●	020203011	Fitting G1/8" ϕ 8 Straight	锁母直通
	3	●	020601247	Plastic Quick Release Bonnet	塑料快排阀盖
	4	●	020601027	Quick Exhaust Valve Leather Cushion	塑料快排阀皮垫
	5	●	020601026	Quick Exhaust Valve Cup	塑料快排阀皮碗
	6	●	020601036	Valve Body	塑料快排阀阀体
	7		020203021	Sliencer G1/4"	铜消音器
	8		030603002	Circlip For Hole	1型孔用弹性挡圈
	9	●	020504005	Seal ring Φ 30 $\times$ 20 $\times$ 7	防尘圈
	10		030818005	Bearing Φ 23X Φ 20 Φ 20	无油轴承
	11	●	020501039	O-ring ϕ 25X3.1	O型圈
	12	●	020502016	Y-ring Φ 25X20X4	Y型圈
	13	●	05010070001	BB Cylinder Block Welding	大汽缸缸体组焊件
	14		030301260	Locking Nut M6	1型全金属六角锁紧螺母
	15	●	05010070302	Bead Breaker Cylinder Rod	大气缸活塞杆
	16		030301218	Nut M18X1.5	六角薄螺母 细牙 A级
	17	●	05010070007	BB Cylinder Pistor;	大汽缸活塞
	18	●	020502014	Y-ring Φ 186X12X6	Y 型 圈
	19	●	020704002	Tower of Spring	塔簧
	20		05010070008	BB Cylinder End Cover	大汽缸端盖
	21		030101022	HHB M6X16	六角头螺栓
	22	●	060107029	BB Cylinder Assy	186单普通大汽缸总成(CF)

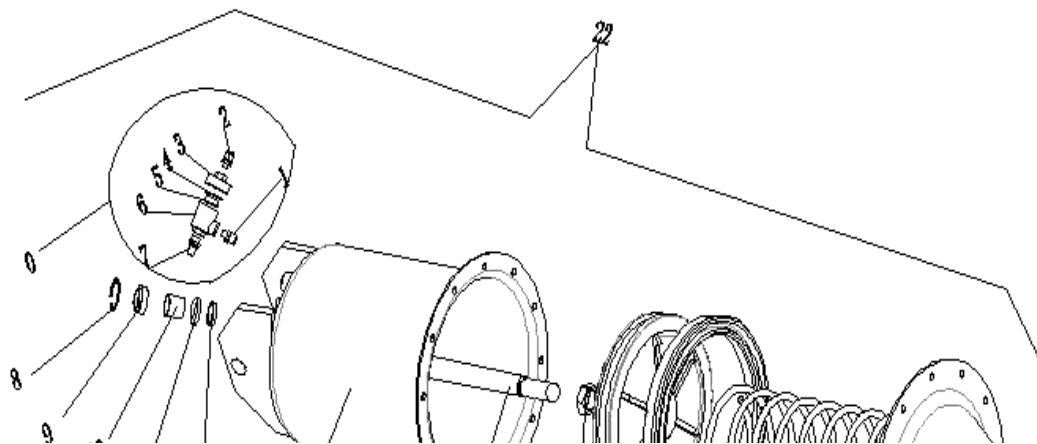

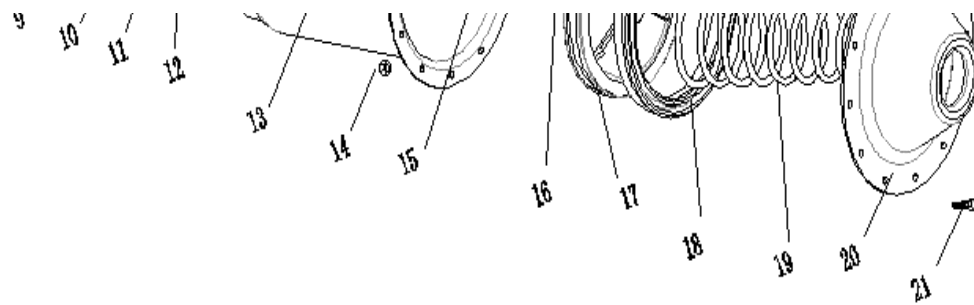

18.08.22	060108021	Tire Changer Pneumatic Triple Pieces	DFC-2010A(A)
----------	-----------	--------------------------------------	--------------


Customer No.	S/N	Class	M/N	English Description	中文描述
1			020203025	Pagoda Pass-through	宝塔直通
2			020203002	FittingG1/4" -Φ8-G1/4"	三通（锁母冲上）
3			020201016	Sanlian Pieces	油水分离器三联件
4			020203029	Fitting; 90°	锁母弯通
5		●	060108021	Pneumatic Triple Pieces	气动三联件(A)

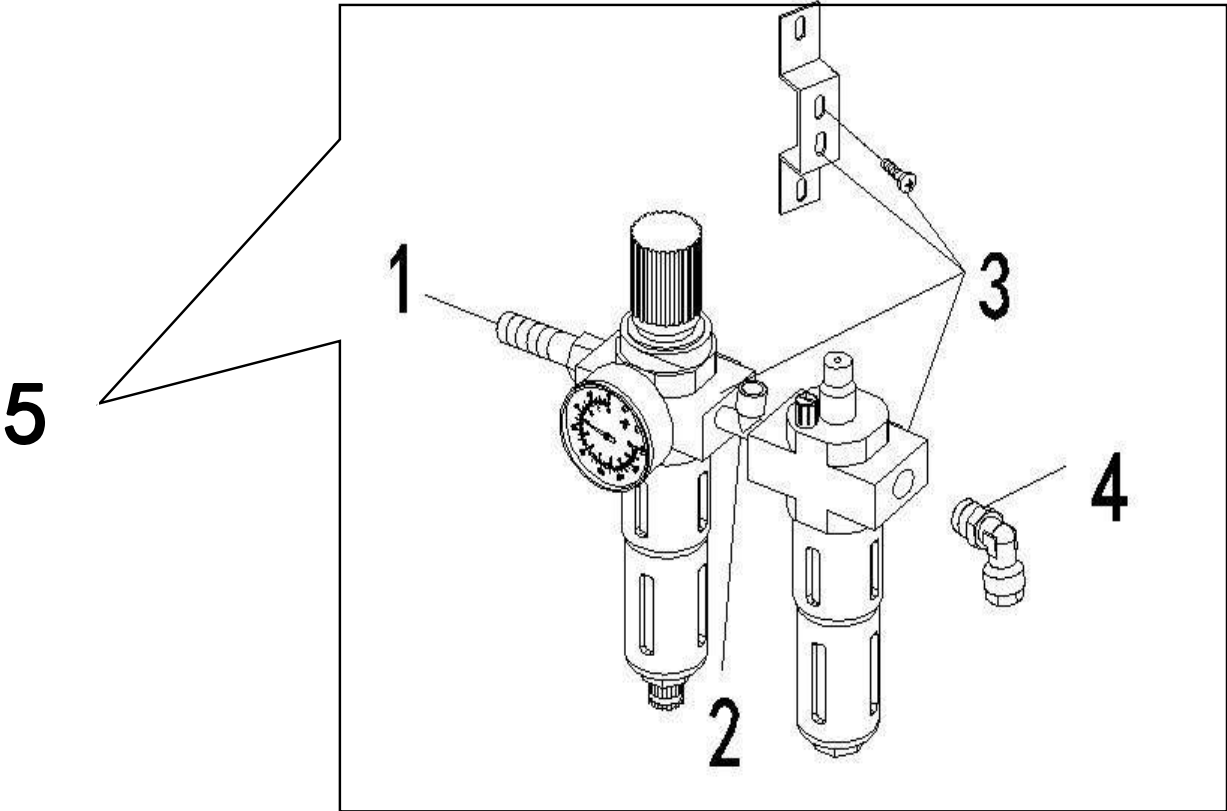

18.08.22	060109007	Tire Changer Horizontal Slides			522R-09-00(A)
Customer No.	S/N	Class	M/N	English Description	中文描述
	1		030201083	SHCS M10x25	内六角圆柱头螺钉
	2	●	020601063	Hex Shaft Cap	六方杠压盖
	3		05010020709	Hex Shaft	六方杠
	4		030301055	Locking Nut M10	1型非金属嵌件六角锁紧螺母
	5		030501006	Washer φ10	平垫圈
	6	●	020701014	Hex Shaft Spring;	六方杠压簧
	7	●	05010020439	Vert Shaft Locking Plate	六方杠锁紧板
	8		05010020711	Horizontal Arm Weldment	推拉臂组焊件(A)
	9		030201023	SHCS M5x12	内六角圆柱头螺钉
	10	●	060111001	Locking Valve Handle Assy	522手动阀总成
	11		030301054	Locking Nut M8	1型非金属嵌件六角锁紧螺母
	12		030501005	Washer φ8	平垫圈
	13		030201066	SHCS M8x35	内六角圆柱头螺钉
	14	●	020101008	Mount / Demount Head Bushing	鸟头套
	15		030202071	Inner Hexgon Set Screw M12X16	内六角平端紧定螺钉
	16	●	05010020047	Duckhead	鸟头(A)
	17	●	020601145	Duck head Spacer	新鸟头垫片
	18	●	020601054	Duckhead Pressure Pad	鸟头压垫
	19		05010020145	Ingot Screws	紧锭螺丝
	20		05010020020	Duckhead Retaining Washer	鸟头垫
	21		030502006	Spring Washer φ10	弹性垫圈
	22		030101085	HHB M10X30	六角头螺栓
	23	●	060110001	Vertical Arm Lock Cylinder Assy	六方杠锁紧汽缸总成(A)
	24		030301108	Nut M12	1型六角螺母 A级和B级
	25		030202073	Inner Hexgon Set Screw M12X25	内六角平端紧定螺钉
	26		05010020440	Horizontal Shaft Link Stopper	四方杠挡块
	27		030502004	Spring Washer φ6	弹性垫圈
	28		030201045	SHCS M6x25	内六角圆柱头螺钉
	29		030201041	SHCS M6x16	内六角圆柱头螺钉
	30		020601148	Tilt Tower Rubber Shock	四方轴定位块
	31		030201046	SHCS M6x30	内六角圆柱头螺钉
	32		030501004	Washer φ6	平垫圈

33		020601093	Hex Shaft Lock Cover Bushing; I Models
34	○	020601092	Locking Plate Cover
35		030201044	SHCS M6x20

塑料隔套
锁紧板罩
内六角圆柱头螺钉

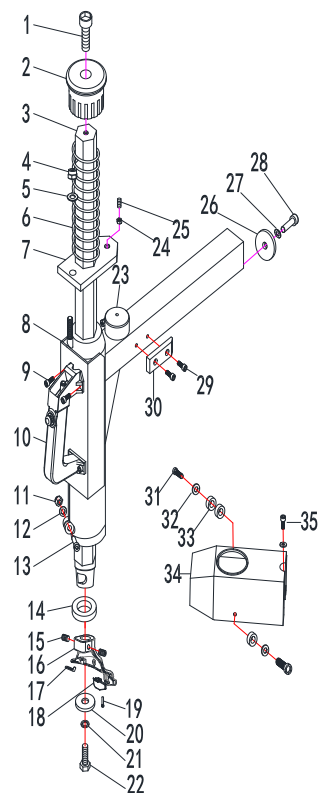


18.08.22	060110001	Tire Changer Vertical Arm Lock Cylinder Assy			522-10-00(A)
Customer No.	S/N	Class	M/N	English Description	中文描述
1			020203038	Fitting G1/8" ϕ 6 90°	锁母弯通
2		●	020601091	Gas Valve Seat	气 阀 座
3		●	020501046	O-ring ϕ 9X2.4	O 型圈
4			030201047	SHCS M6x35	内六角螺钉
5		●	020502009	Y-ring Φ 60X47X7	Y 型圈
6		●	05010020432	Arm Lock Cylinder Piston	锁紧气阀活塞


18.08.22	060110003	Tire Changer	Horizontal Arm Lock Cylinder	522-10-00(C)
----------	-----------	--------------	------------------------------	--------------

Customer No.	S/N	Class	M/N	English Description	中文描述
	1		020203038	Fitting; G1/8" Φ6 90°	锁母弯通
	2	☐	020601091	Gas Valve Seat	气 阀 座
	3	☐	020501046	O-ring Φ9X2.4	O 型圈
	4		030201047	SHCS M6x35	内六角螺钉
	5	●	020502009	Y-ring Φ60X47X7	Y 型圈
	6	☐	05010020432	Arm Lock Cylinder Piston	锁紧气阀活塞

18.08.22	060111001	Tire Changer	Locking Valve Handle Assy	522-11-00
----------	-----------	--------------	---------------------------	-----------

Customer No.	S/N	Class	M/N	English Description	中文描述
	1		020203019	Fitting; 6mm 1/8 Straight	快插直通
	2		020601124	Locking Valve Handle; I Models	手 动 阀
	3		05010020442	Locking Valve Shaft; I Models	手动阀杆
	4		020501023	O-Ring 8 X 2.65	O 型圈
	5		020601102	Locking Valve O-Ring Spacer; I Models	手动阀骨架
	6		020601169	Locking Valve Metal Spacer; I Models	手动阀外套（红色）
	7		020601094	Locking Valve Button; I Models	手动阀扣（红色）

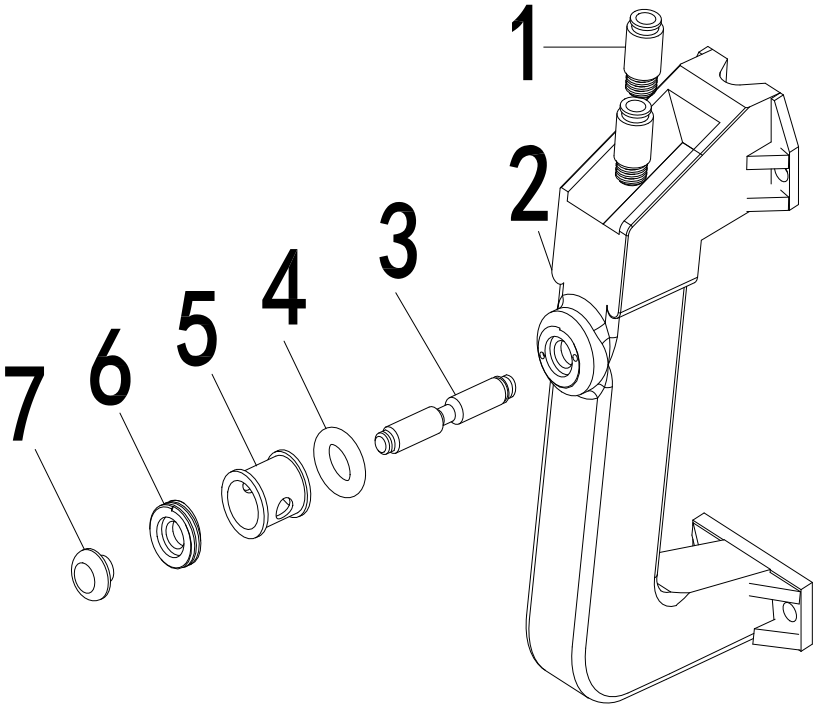

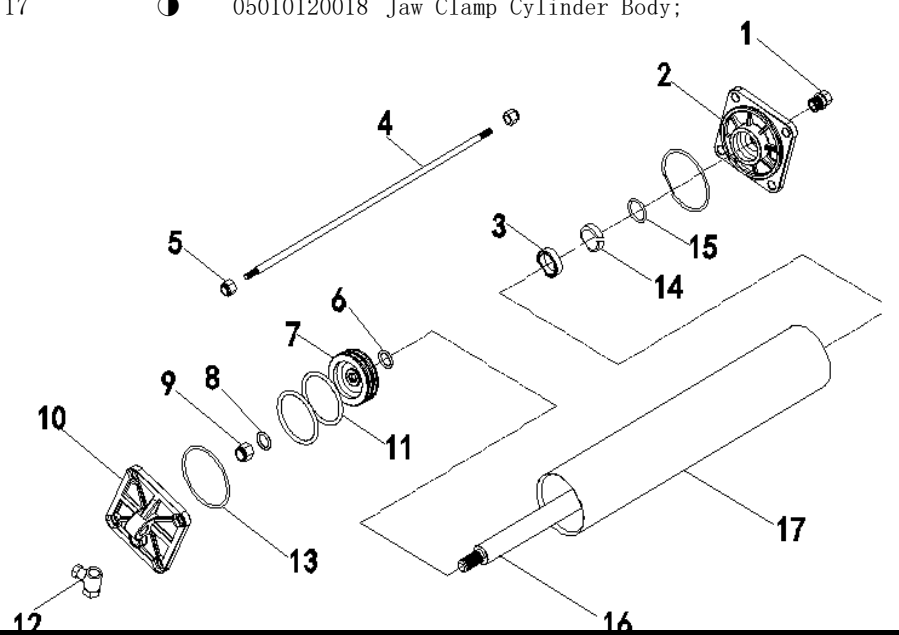18.08.22	060112003	Tire Changer Jaw Clamp Cylinder			522-03-11
Customer No.	S/N	Class	M/N	English Description	中文描述
	1	●	020203011	Fitting; Straight	锁母直通
	2	●	05010120003	Small Front Cylinder Cover	小汽缸前盖
	3	●	020502002	Y-ringΦ32X20X6	Y型圈
	4	●	05010120017	Double-headed bolt	双头联接螺栓
	5		030301002	Nut M8	1型六角螺母
	6	●	020501002	O-ringφ16X2.4	O型圈
	7	●	05010120005	Cylinder Piston	铝 活 塞
	8		030501007	Washer φ12	平垫圈
	9		030301056	Locking Nut M12	1型非金属嵌件六角锁紧螺母
	10	●	05010120001	Small Rear Cylinder Cover	小气缸后盖
	11	●	020501006	O-ring	O型圈
	12	●	020203065	Banjo bolt	活络弯通
	13		020501005	O-ring	O型圈
	14		020503002	Jaw Clamp Cylinder Wear Strip	导向带
	15	●	020501003	O-ring	O 型圈
	16	●	05010120019	Jaw Clamp Cylinder Rod;	小汽缸活塞杆
	17	●	05010120018	Jaw Clamp Cylinder Body;	小汽缸缸体
					
18.08.22	060113002	Tire Changer Square Turntable			522-13-00

Customer No.	S/N	Class	M/N	English Description	中文描述
	1		05010130016	Square Turntable;	二盘主板
	2		05010130017	Square Turntable Spacer	二盘中心套
	3		05010130015	Square Turntable Link;	二盘拉板
	4		05010130022	Square Turntable Press Pin	二 盘 销


18.08.22

060114001


Tire Changer Rotary Valve Part


450-14-00

Customer No.	S/N	Class	M/N	English Description	中文描述
	1	●	060114001	Rotary Valve	普通塑料转阀总成
	2		020203011	Fitting; Straight $\phi 8\text{-G1/8''}$	锁母直通
	3		030204001	Cross Recessed Tapping Screws	十字槽盘头自攻螺钉
	4		020601028	Rotary Joint Block Inner Piece	转阀内套
	5		020501004	O-ring $\phi 60 \times 2.65$	O型圈
	6		020601029	Rotary Joint Block Outer Piece	转阀外套

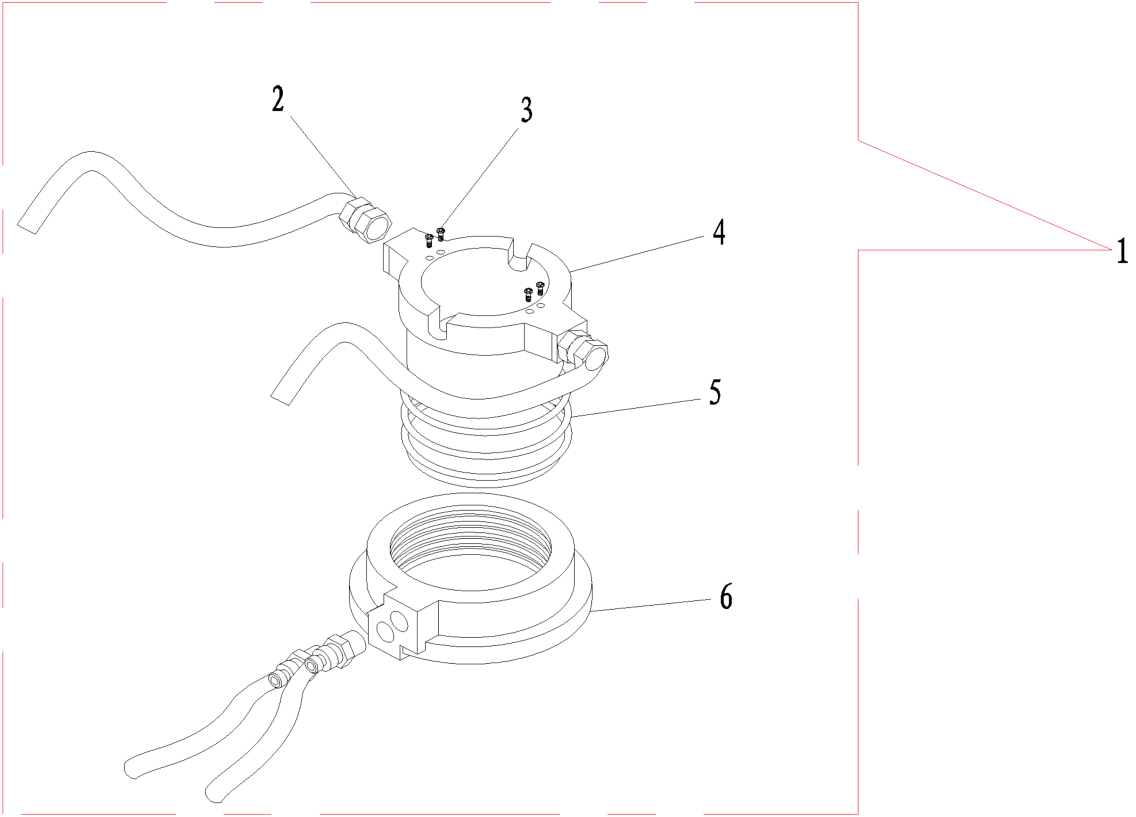

18.08.22	060117005	Tire Changer	Tilt Back Cylinder Assy	522-02-16(A)	
Customer No.	S/N	Class	M/N	English Description	中文描述
	1	●	05010170023	Piston Rod	活塞杆 Φ20X263
	2	●	020203030	Fitting; 8mm 1/8" 90°	锁母弯通
	3		05010170020	Tilt Tower Cylinder Front Plate	缓充汽缸上盖
	4	●	020501003	O-ring φ25X3.1	O 型圈
	5	●	030818001	Bearing	含油轴承
	6	●	020502002	Y-ring Φ32X20X6	Y型圈
	7	●	05010170016	Tilt Tower Cylinder	汽缸缸体L=146MM
	8	●	05010120005	Small Cylinder Piston	铝 活 塞
	9	●	05010170018	Tilt Back Cylinder Bolt	缓冲汽缸螺栓
	10		030502005	Spring Washer φ8	弹性垫圈
	11		030301136	Nut M8	六角薄螺母 A级和B级
	12	●	020501006	O-ring φ75X5.7	O型圈
	13	●	020501002	O-Ring 16 X 2.4	O 型圈
	14		030502007	Spring Washer φ12	弹性垫圈
	15		030301138	Nut M12	六角薄螺母 A级和B级
	16	●	020501005	O-ring φ75X2.65	O型圈
	17		05010170015	Tilt Tower Cylinder Rear Plate	汽缸下盖
	18		020203011	Fitting; 8mm 1/8"	锁母直通
	19		030903009	Pin φ2X28	开口销
	20		05010020431	Tilt Tower Cylinder Upper Pin	立柱汽缸连接轴二
	21		05010020446	Tilt Cylinder Conector	缓冲气缸压套
	22		05010020447	Pad	垫
	23		020101040	Rubber Spacer	橡胶圈
	24		05010020430	Tilt Tower Cylinder Upper Pin	立柱汽缸连接轴一

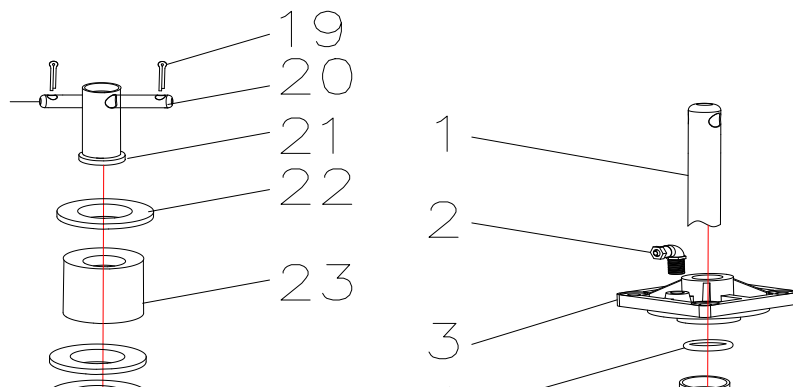

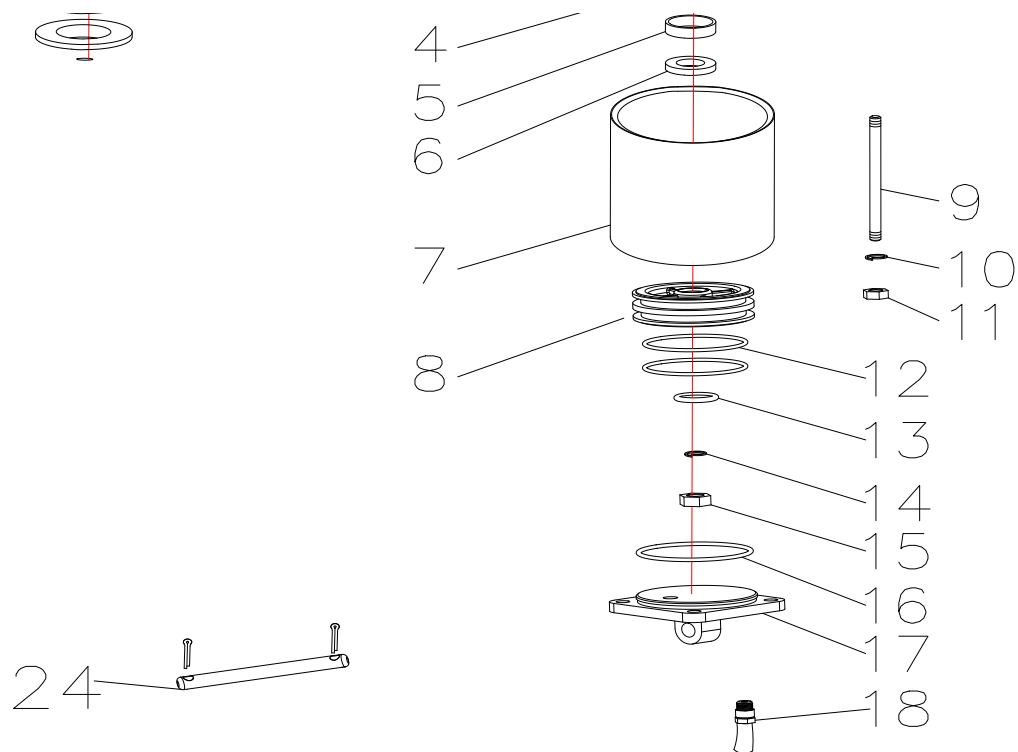


18.08.22

060118004 Tire Changer 3Ph Motor /Hanging Bracket Assembly Part 522W-18-00(A)
三项双速电机/吊架总成A

Customer No.	S/N	Class	M/N	English Description	中文描述
	1	●	020401006	Motor	电机
	2		05010180008	Motor Support Weldment	电机座焊接件 (C)
	3	●	05010180001	Motor Pulley	电机皮带轮
	4		030202280	Hexagon Socket Set Screw With Flatpoint M8X12	内六角圆柱端紧定螺钉
	5	●	020401025	Rubber Washer	大聚氨酯垫
	6		030101366	Hexagon Head Bolt With Full Thread	六角头螺栓全螺纹
	7		030301054	Nut M8	1型非金属嵌件六角锁紧螺母
	8	●	020403002	Belt A610	三角带
	9		060118004	3Ph Motor /Hanging Bracket Assembly Part	三相双速电机/吊架总成A



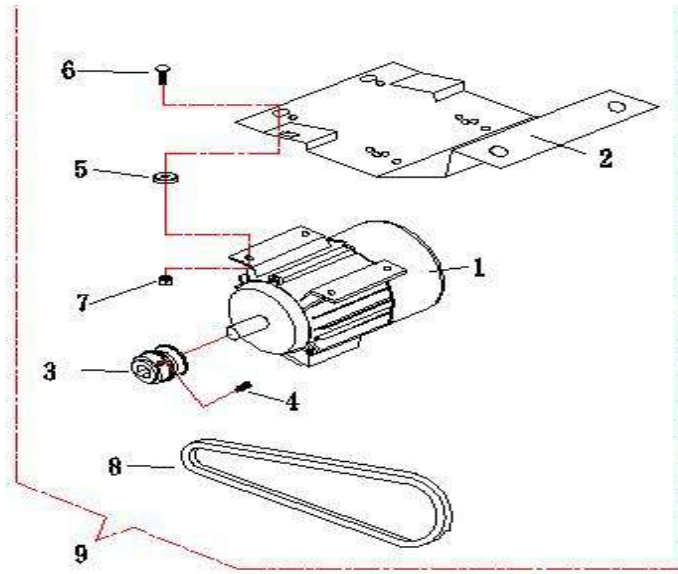

18.08.22	060153003	Tire Changer	Gear Box Bolt	53-02	
Customer No.	S/N	Class	M/N	English Description	中文描述
	1		030101119	HHB M10X200	六角头螺栓
	2		030101111	HHB M10X160	六角头螺栓
	3		030101113	HHB M10X170	六角头螺栓
	4		030301003	Nut M10	螺母
	5		030501006	Washer $\phi 10$	平垫圈
	6		030502006	Spring Washer $\phi 10$	弹性垫圈
	7		030501106	Pad $\phi 10$	大边垫
	8		020401028	Rubber Washer	小聚氨酯垫
	9		020401025	Rubber Washer	大聚氨酯垫
	10		030301055	Nut M10	1型非金属嵌件螺母

The diagram illustrates the assembly of a tire changer gear box. The central component is the gear box, which is mounted onto a base plate. Four mounting brackets are attached to the gear box, each secured by a bolt (1) and a nut (2). The mounting brackets are further secured to the gear box by bolts (3) and nuts (4). The gear box is mounted to the base plate using bolts (5) and nuts (10). The diagram also shows the assembly of the mounting brackets, which involves the use of washers (5, 6), pads (7), and rubber washers (8, 9).

18.08.22	060110910	Tire Changer	Inflation Gun Part	522-19-00	
Customer No.	S/N	Class	M/N	English Description	中文描述
	1		020207001	Inflation Gun	充气枪
	2	●	020208001	Coiled Hose外φ8内φ5	螺旋管
	3		060110910	Inflation Gun Assy	普通打气枪总成
