


Direct Driven Air Compressor Parts Breakdown

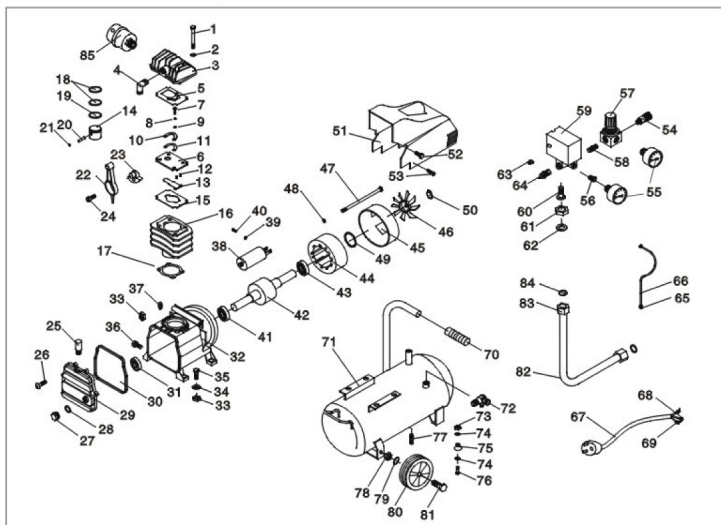

Parts List

1	HEX BOLT
2	LOCK WASHER
3	CYLINDER HEAD
4	EXHAUST ELBOW
5	CYLINDER GASKET
6	VALVE PLATE
7	PHLP HD SCR
8	LOCK WASHER
9	FLAT WASHER
10	VALVE LIMITER
11	VALVE REED
12	POSITION PIN
13	INLET VALVE
14	PISTON
15	CYLINDER GASKET UPPER
16	CYLINDER
17	CYLINDER GASKET LOWER
18	COMPRESSION RING
19	OIL RING
20	PISTON PIN
21	EXT RETAINING RING
22	CONNECTING ROD
23	ECCENTRIC
24	CAP SCREW
25	OIL FILL CAP
26	PHLP HD SCR
27	OIL INDICATOR SIGHT
28	OIL INDICATOR SEAL
29	CRANKCASE COVER
30	COVER SEAL
31	OIL SEAL
32	CRANKCASE
33	HEX NUT
34	FLAT WASHER
35	HEX BOLT
36	OIL PLUG
37	INT TOOTH WASHER
38	CAPACITOR
39	LOCK WASHER 3MM
40	PHLP HD SCR
41	BALL BEARING 6204
42	ROTOR
43	BALL BEARING 6202

44	STATOR
45	REAR MOTOR COVER
46	FAN
47	HEX BOLT
48	LOCK WASHER
49	SPACER
50	EXT RETAINING RING
51	MOTOR COVER
52	HEX BOLT
53	TAP SCREW
54	QUICK CONNECT
55	PRESSURE GAUGE
56	CONNECTOR
57	REGULATOR
58	CONNECTOR
59	PRESSURE SWITCH
60	PRESSR SWITCH CONNECT
61	COMPRESSION NUT 3/8
62	SPECIAL WASHER 3/8
63	STRAIN RELIEF
64	SAFETY VALVE
65	COMPRESSION NUT
66	RELIEF TUBE
67	POWER CORD
68	CABLE CONNECTOR
69	CABLE CONNECTOR
70	HANDLE GRIP
71	TANK
72	CHECK VALVE
73	HEX NUT
74	FLAT WASHER
75	FOOT
76	HEX BOLT
77	DRAIN VALVE
78	HEX NUT
79	LOCK WASHER
80	WHEEL
81	AXLE
82	TUBE
83	COMPRESSION NUT 3/8
84	COPPER WASHER
85	AIR FILTER