


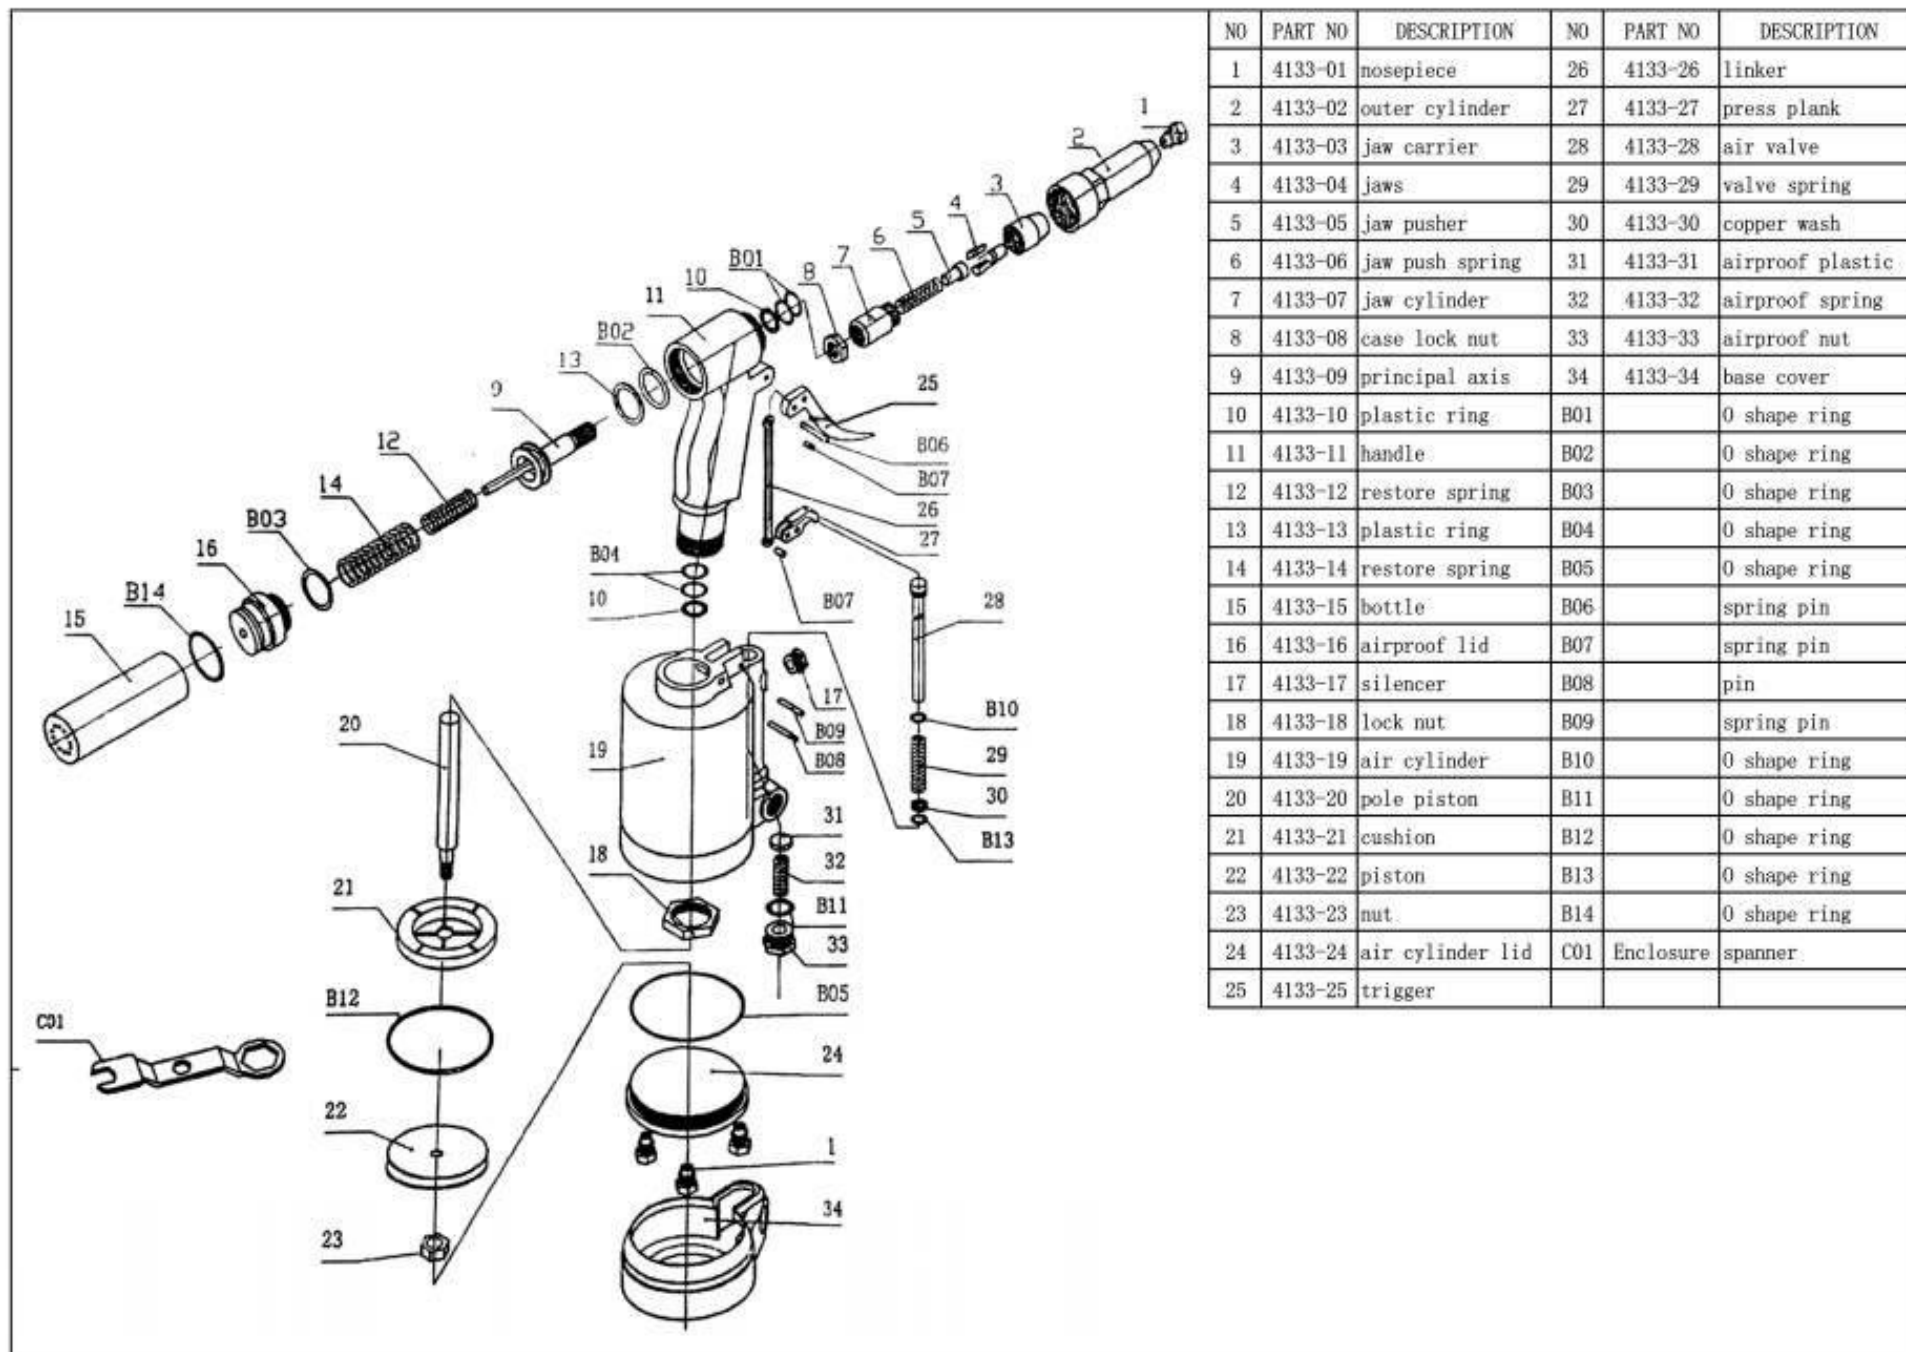

NO	PART NO	DESCRIPTION	NO	PART NO	DESCRIPTION
1	4133-01	nosepiece	26	4133-26	linker
2	4133-02	outer cylinder	27	4133-27	press plank
3	4133-03	jaw carrier	28	4133-28	air valve
4	4133-04	jaws	29	4133-29	valve spring
5	4133-05	jaw pusher	30	4133-30	copper wash
6	4133-06	jaw push spring	31	4133-31	airproof plastic
7	4133-07	jaw cylinder	32	4133-32	airproof spring
8	4133-08	case lock nut	33	4133-33	airproof nut
9	4133-09	principal axis	34	4133-34	base cover
10	4133-10	plastic ring	B01		0 shape ring
11	4133-11	handle	B02		0 shape ring
12	4133-12	restore spring	B03		0 shape ring
13	4133-13	plastic ring	B04		0 shape ring
14	4133-14	restore spring	B05		0 shape ring
15	4133-15	bottle	B06		spring pin
16	4133-16	airproof lid	B07		spring pin
17	4133-17	silencer	B08		pin
18	4133-18	lock nut	B09		spring pin
19	4133-19	air cylinder	B10		0 shape ring
20	4133-20	pole piston	B11		0 shape ring
21	4133-21	cushion	B12		0 shape ring
22	4133-22	piston	B13		0 shape ring
23	4133-23	nut	B14		0 shape ring
24	4133-24	air cylinder lid	C01	Enclosure	spanner
25	4133-25	trigger			