

Walker Infloor Systems 880 Series Floor Box

INSTALLATION INSTRUCTIONS

Products Covered: 885B, 886B, 887B, and 889B

 Position floor boxes in desired location (see Figure A). Floor box minimum spacing is 6" [152mm] on center.

NOTE: Do not position floor boxes within this minimum spacing.

- Connect conduits to box using appropriate conduit adaptors (not supplied by Walker (see Figure B).
- Attach box cover. Align notches on one side of cover with box tabs and strike other side of cover with a mallet to snap into place (see Figure C).
- Adjust to desired level of concrete pour using the four adjusting screws.
- **5.** Anchor box to form/subfloor. Cat. Nos. 885B and 886B should be secured with wire. Cat. Nos. 887B and 889B may be secured with nails or screws.
- **6.** Pour concrete to top of floor box.

Walker® electrical systems conform to and should be properly grounded in compliance with requirements of the current National Electrical Code or codes administered by local authorities.

All electrical products may present a possible shock or fire hazard if improperly installed or used. Walker electrical products may bear the mark as UL Listed and/or Classified and should be installed in conformance with current local and/or the National Electrical Code.







