

SPARE PARTS LIST FOR WOOD CHIPPER GBD-70

Dia.no.	Part Name	Qty
1	Base Frame Assembly	1
2	Wheel	2
3	Flat Washer	3
4	Hex Bolt	9
5	Rubber Pad	1
6	Support Leg	1
7	Hex Bolt	1
8	Flat Washer	53
9	Spring Washer	47
10	Lock nuts	24
11	Hex bolts	8
12	Engine base plate	1
13	Engine	1
14	Cup Head Square Neck Bolt	4
15	Screw Rod	1
16	Flat Washer	2
17	Adjustment Handle	1
18	Shaft Ring	1
19	Flat Key	1
20	Flat Washer	1
21	Chipping Room Assembly	1
22	Hex Bolt	10
23	Blade	2
24	Blade Drum	1
25	Hexagon socket round head screw	12
26	Upper Cover Assembly	1
27	Hex Bolt	10
28	Bearing Seat with Bearing	2
29	Bearing Seat Spacer	6
30	Big Pulley	1
31	Flat Key	1
32	Washer	1
33	Hex Bolt	10
34	Belt Cover Side Plate	1
35	Belt	2
36	Flat Washer	10
37	Switch Clamp Assembly	1
38	Belt Cover side fixed Plate	1
39	Switch	1
40	Small Pulley Shaft Sleeve	1
41	Flat Key	1
42	Small Pulley	1
43	Flat Washer	1
44	Hex Bolt	1
45	Blade adjustment block	1
46	Spring Washer	8
47	Flat Washer	2
48	Pressure plate	1
49	Splash Protection plate	1
50	Feed Hopper Assembly	1
51	Handle	1
52	Knob	2
53	Lock nut	8
54	Discharge Chute	1
55	Adjustment plate	1
56	Lock nut	4
57	Wheel Axle Spacer	2
58	Cup Head Square Neck Bolt	2
59	Bearing Seat Cover	1
60	Belt Cover	1
61	Spring Washer	4
62	Elastic Cylinder Pin	2
63	Baffle	2
64	Hex bolts	2
65	Switch seating plate	1
66	Switch Box	1
67	Flat Washer	2
68	Lock nut	2
69	Emergency Stop	1
70	Wire Hardness	1
71	Switch Box Cover	1
72	Tapping Screw	4
73	Threaded Sleeve	1
74	Button	1
75	Lock nut	2
76	Hexagon socket head bolt	2
77	Rubber Tube	1

